


SPRING HANGERS

Quadruple Spring, Quadruple Spring-CR

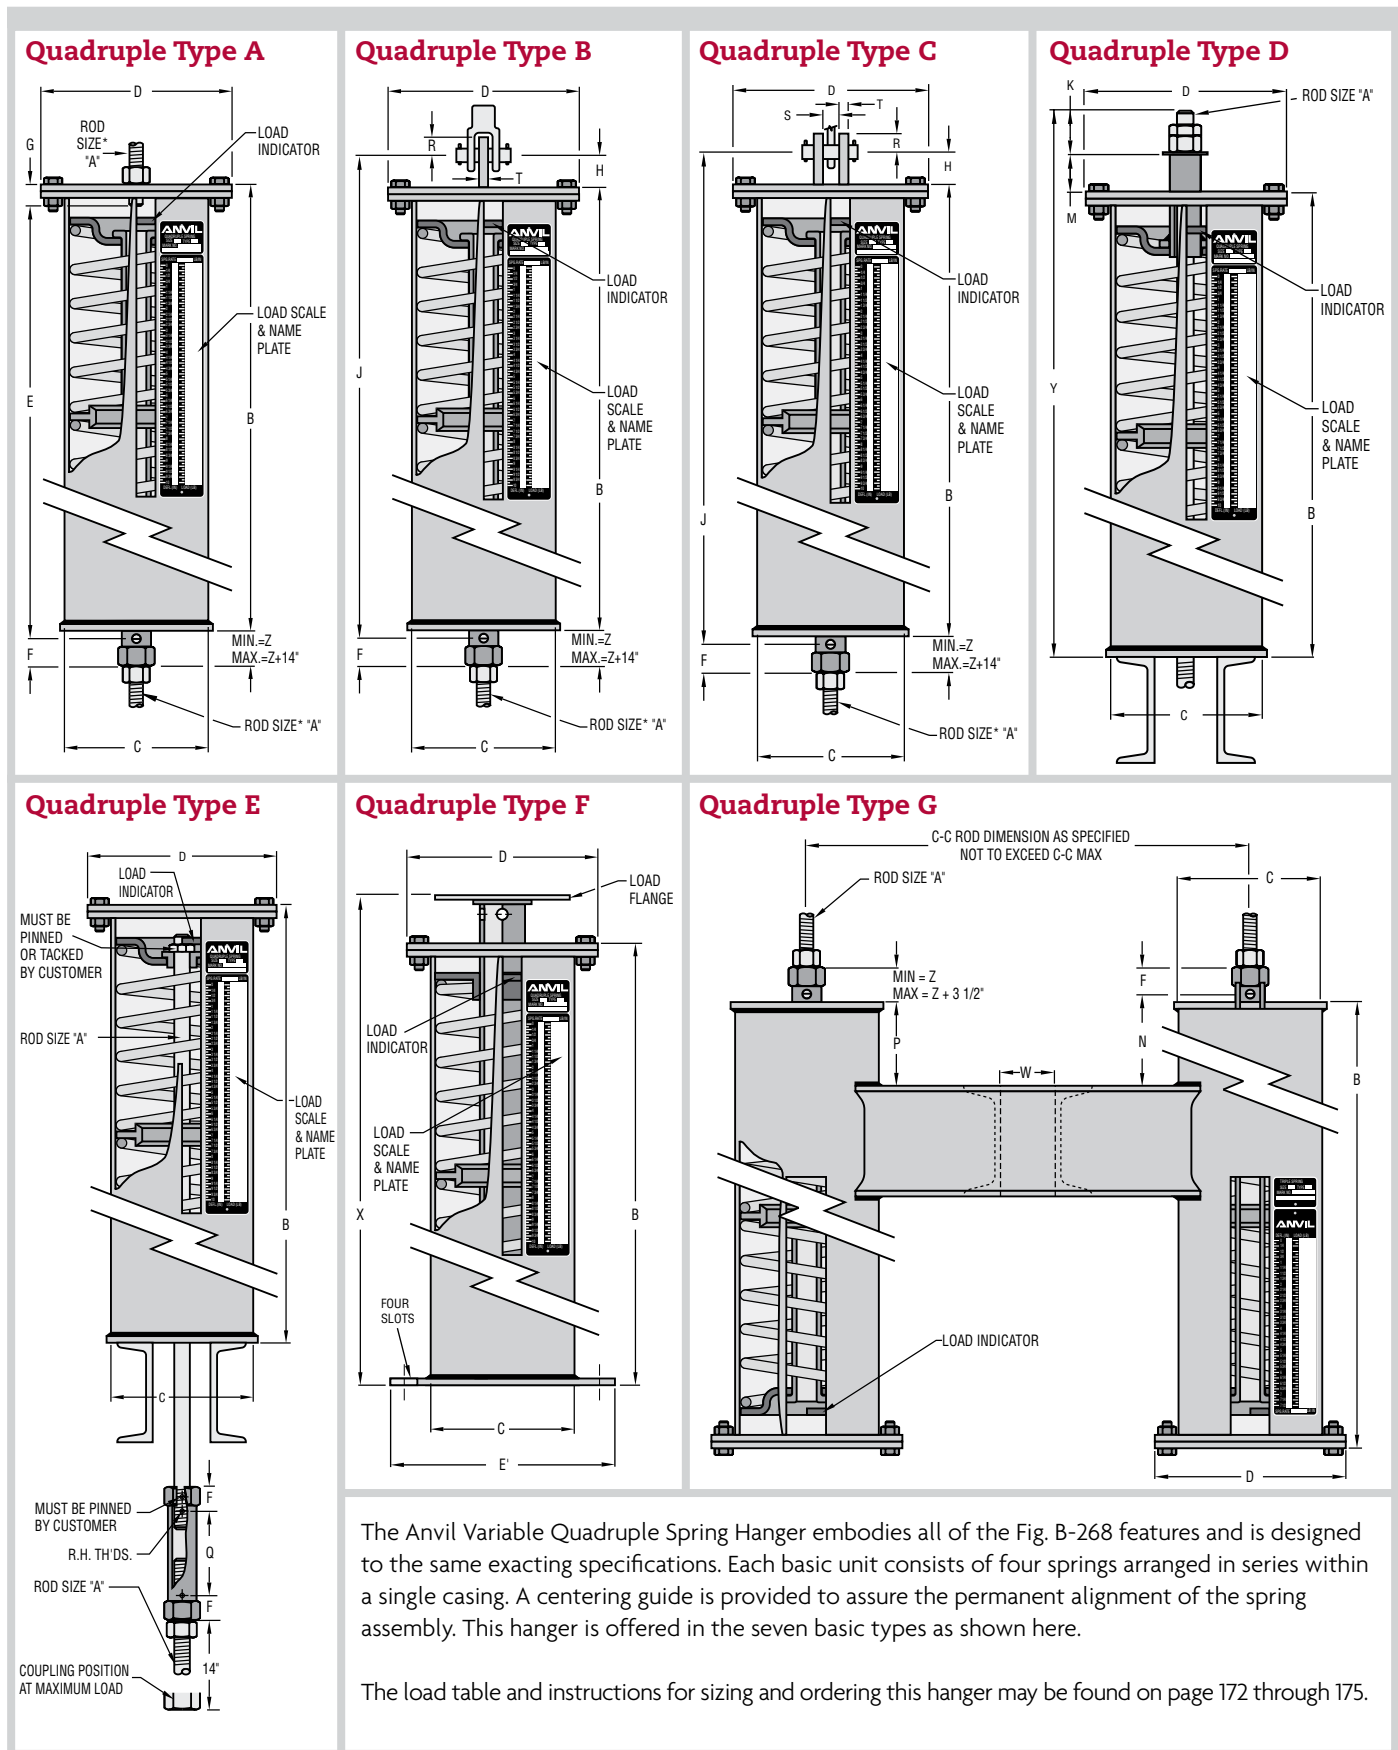

Quadruple Spring, Quadruple Spring-CR

QUADRUPLE SPRING: DIMENSIONS (IN)																				
Hanger Size	General Dimensions						Rod Take Out For Types					Type A	Type D		Type F		Type G			
	Rod Size A	R.H. Thread Length	Casing Length B	Casing Dia. C	Min Thread F	Z	A	B & C	D	E	G	Depth Thread G	K	M	Loaded Length Dim X		P			
							E	J	Y	Q	N				Min	Max				
0	1/2	16	25 1/8	4	1 5/16	1 5/16	25 1/8	26 5/8	37 1/8	15 1/8	1 1/2	7/16	1 1/4	7 3/4	26 15/16	28 15/16	1 1/2			
1			28 5/8				30 1/8	40 5/8	30 7/16						32 7/16					
2			31 1/8				33 1/8	43 3/8	33 7/16						35 7/16					
3	1/2	16	27 7/8	5 9/16	1 5/16	1 5/16	27 7/8	29 3/8	39 7/8	15 1/8	2	7/16	1 1/4	7 3/4	29 11/16	31 11/16	2			
4			30 3/8				31 7/8	42 3/8	32 3/16						34 3/16					
5			33 3/8				34 5/8	45 1/8	34 15/16						36 15/16					
6	5/8	16	32 15/16	6 5/8	1 5/16	1 5/16	32 15/16	34 7/16	45 1/8	15 1/8	2	5/8	1 1/2	7 9/16	34 7/8	36 7/8	2			
7			36 7/8				38 3/8	49 1/16	38 13/16						40 13/16					
8			38 11/16				40 3/16	50 7/8	40 5/8						42 5/8					
9	3/4	16	38 13/16	8 5/8	1 1/4	1 1/4	38 13/16	40 5/16	51 1/8	15 1/2	3	1	1 3/4	7 1/16	40 7/8	42 7/8	3			
10			43 3/4				45 1/4	56 1/16	45 13/16						47 13/16					
11		17	35				35	36 1/2	47 5/16				37 1/16		39 1/16					
12	1	17	37 1/2	8 5/8	1 1/4	1 1/4	37 1/2	39 1/2	50 5/16	15 1/2	3 7/8	1	2 1/4	7 1/16	39 9/16	41 9/16	4			
13			47 3/4				49 3/4	60 9/16	49 13/16				51 13/16							
14			1 1/4				48 3/8	1 3/8	48 3/8				51 1/4		61 15/16	4		2 1/2	50 7/16	52 7/16
15	1 1/4	18	48 1/8	8 5/8	1 3/8	1 1/4	48 1/8	51	61 15/16	15 1/2	4	1 3/8	3	7 1/16	50 3/16	52 3/16	4			
16	1 1/2		57 7/8				1 15/16	1 15/16	57 7/8				60 7/8		71 1/16	15 9/16		3 1/2	59 15/16	61 15/16
17	1 3/4		19				66 1/8	66 1/8	69 1/8				80 3/16		15 9/16	4		68 3/16	70 3/16	
18	2	19	64 1/8	12 3/4	2 3/4	2 3/4	64 1/8	68 1/8	78 11/16	14 7/8	4	2 1/4	4 9/16	7	66 5/16	68 5/16	4			
19	2 1/4		73 1/8				73 1/8	77 5/8	88 1/8	15 7/16			5		75 5/16	77 5/16				
20	2 1/2		20				86 1/8	86 1/8	90 5/8	101 11/16			15 15/16		5 9/16	88 5/16		90 5/16		
21	2 3/4	21	95 7/8	12 3/4	3 5/8	3 5/8	95 7/8	99 3/8	113 3/16	15	4	2 3/4	6 1/4	9 5/16	98	100	4			
22	3		120 7/8				124 1/8	138 7/16	15 1/2	3					6 5/8	122 1/4		124 1/4		

Attachment rods and nuts not furnished.
See page 180 for Type F roller and guided load column information.

See Fig. B-268 for dimensions not listed